



Active Thermal Management

*The trusted name in thermal protection*

## Instructions for installation of the Cool-view™ Electronic Thermometer



**Product Description** -- The Cool-view electronic thermometer is designed to read temperatures within a rack of audio-video components. It mounts in a single rack space and has a thermal sensor at the end of a 24” long lead.



Simply mount the Cool-view as you would any 1U high piece of rack-mount equipment, and place the thermal sensor in the region whose temperature is to be measured. Connect the lead from the wall-mount power supply to the power connector coming from the thermometer module. Plug the power supply into any AC outlet. *The supply can accept any input voltage from 100 to 240 volts, 50 or 60 Hz.*

To switch from degrees Fahrenheit to degrees Celsius, simply push the blue button on the back of the module.

### WARRANTY

Active Thermal Management (“ATM”) warrants its products against defects in materials and workmanship for a period of one year from date of purchase. We will repair or replace, at our option, any ATM product which has a defect in materials or workmanship. The product must be properly packaged and returned prepaid with an ATM return authorization number clearly written on the outside of the shipping carton and with a copy of the bill of sale or ATM invoice to verify the original purchase date.

**Our warranty does NOT apply to:**

- 1. Shipping damage, either concealed or visible. Claims must be filed with the carrier.**
- 2. Damage caused by improper installation or improper electrical voltage.**
- 3. Any product which has been modified, unless authorized by ATM.**
- 4. Damage caused by corrosion, abrasion, immersion, or severe temperatures.**
- 5. Products which have been subject to abuse, misuse, abnormal usage, or accident.**

**These warranties give you specific legal rights, and are subject to any applicable consumer protection legislation. You may also have additional rights which vary from state to state.**

**No other warranties, expressed, implied, or written, shall apply to this product. ATM will not be responsible for any consequential or incidental damages, loss of property, revenues, or profit, cost of removal, installation, or reinstallation, personal injury, or for any breach of warranty, regardless of how caused.**